



# Quick Start

## M M-Class LXI Instruments

**1**



### Microsoft Windows 7, Windows 2000/XP/Vista Installation:

#### Install the instrument software & documentation.

- a** Insert the Software & Documentation CD. If you do not have the CD it can be downloaded from the ZTEC Support Center at [www.ztecinstruments.com/support](http://www.ztecinstruments.com/support).
- b** If auto-setup does not begin, launch it manually by opening the CD in Explorer and clicking setup.exe. Follow the on-screen installation instructions.

**2**

#### Configure the LXI Instrument.

- a** Connect the ZTEC® LXI instrument to your network as dictated by your network administrator. LXI instruments default to DHCP, but will still automatically acquire an IP address if no DHCP server is present.
- b** Open ZFind™ by clicking on the desktop shortcut.
- c** Add the LXI instrument to ZFind™ by clicking  **Search for LXI Instruments** and double-clicking on the address of the LXI instrument. The instrument will then be displayed in the ZFind™ window.
- d** Configure the instrument network settings by selecting the instrument and clicking  **View LAN Settings** in ZFind™. This will open the webLXI interface in your default web browser. If the IP address is modified, re-add the instrument in ZFind™.

**3**

#### Confirm proper installation.

- a** You are now ready to use your instrument! Open the provided software executable, or the programming environment of your choice, to use your instrument.
- b** The instrument driver files are located in C:\Program Files\ZTEC Instruments\MClass by default.
- c** Visit the ZTEC Knowledgebase for text-based programming examples and extra helpful hints at [www.ztecinstruments.com/support/kb](http://www.ztecinstruments.com/support/kb).



Refer to the product manual for more detailed instructions. If you need further assistance, contact ZTEC Support by visiting [www.ztecinstruments.com/support](http://www.ztecinstruments.com/support) and opening a support ticket or by calling **1-866-ZTEC-NOW**.